




# Sharp Aquos LC13B2UA Speakers Replacement

Give a short summary.

Written By: Robert Hobson

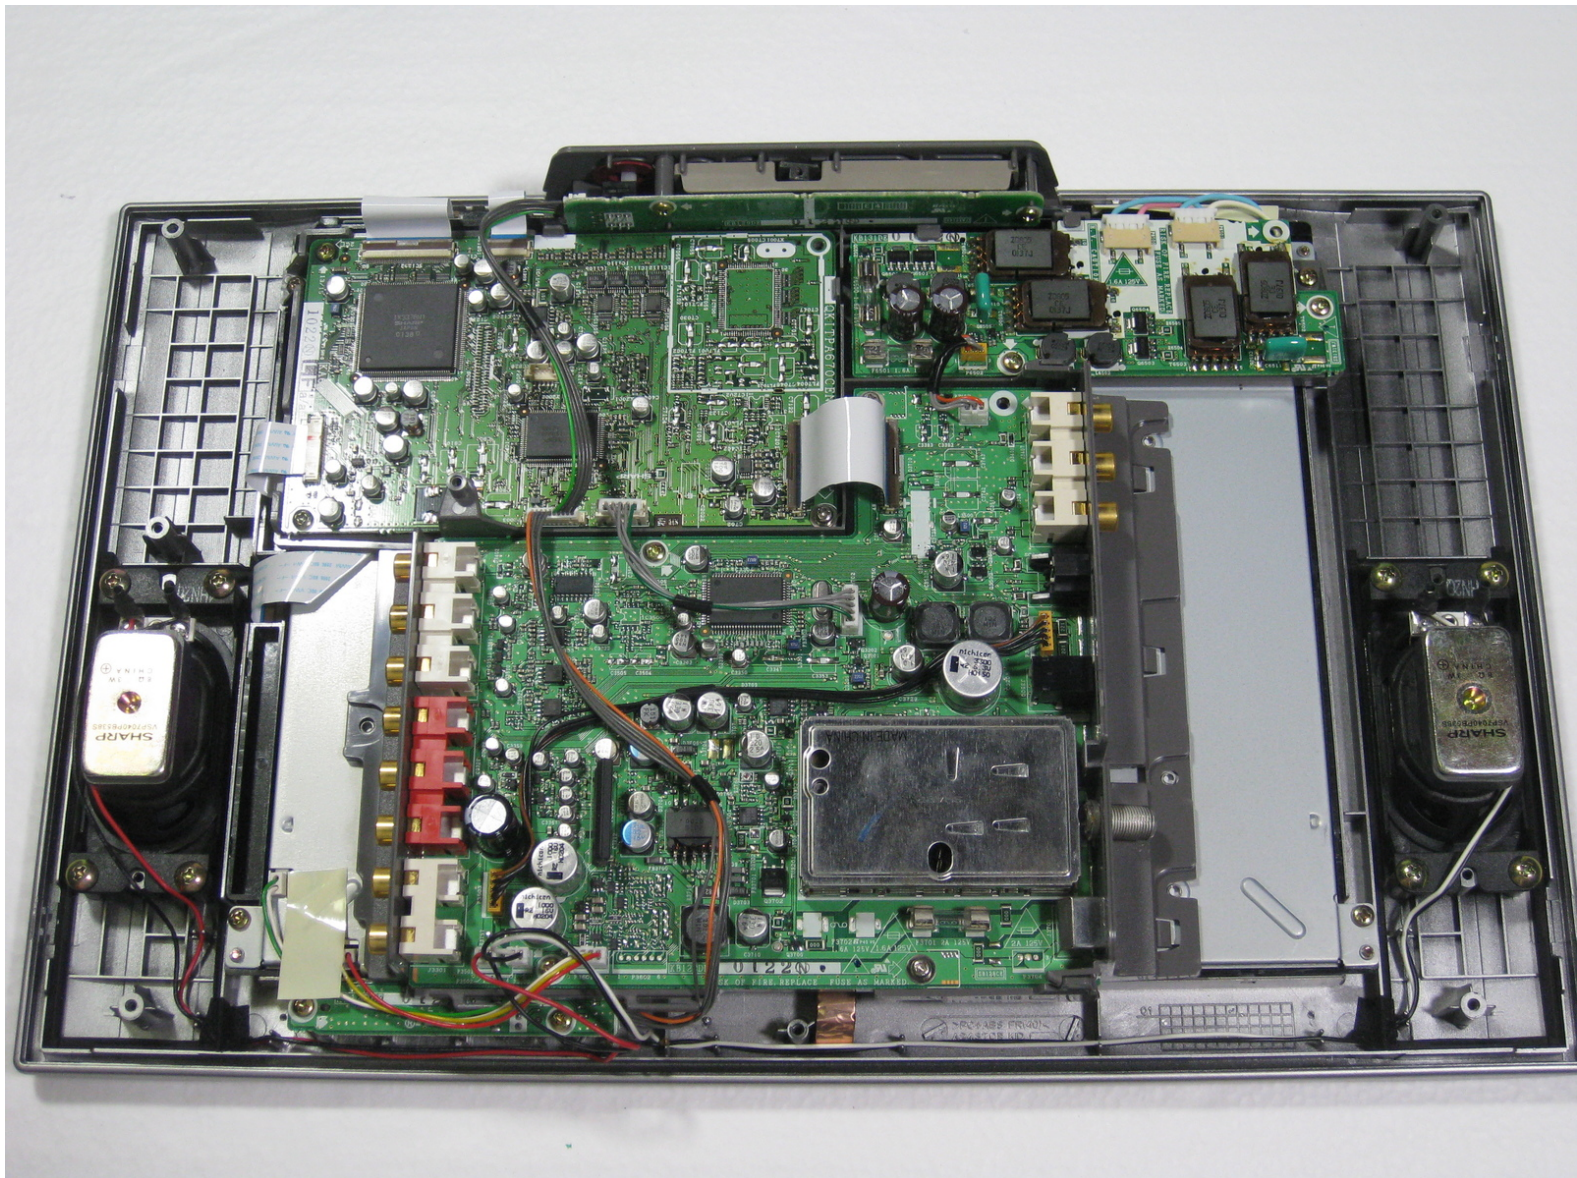

## INTRODUCTION

Outline what you are going to teach someone how to do.

---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-



## Step 1 — Stand



- Place the TV face down on a flat smooth surface as to not scratch the screen.
- Remove the four 8mm screws attaching the stand to the TV.

## Step 2




- Lift the stand off the television.

### Step 3 — Back Case



- Remove the two back panels to display the audio and video inputs..

### Step 4

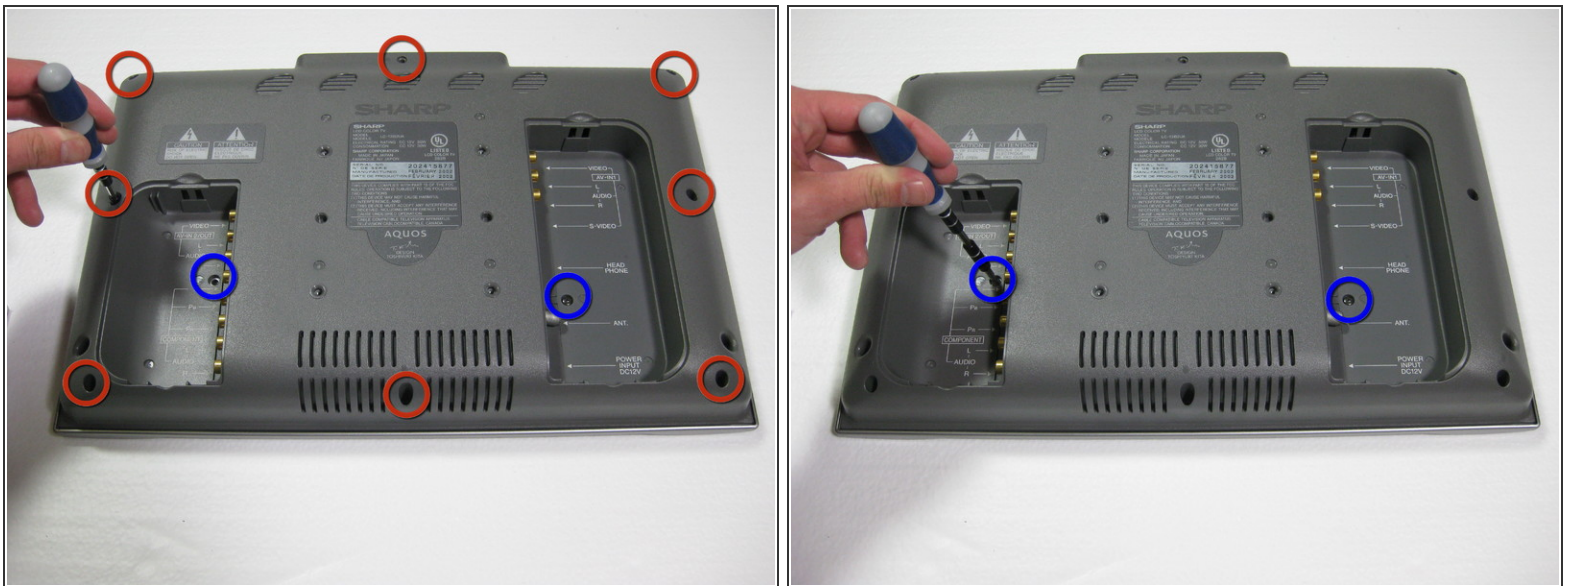

- Remove the eight 6mm Phillips screws around the edge.
- Remove the two 6mm Phillips near the inputs.





## Step 5



- Lift and remove the back case of the television.



## Step 6 — Speakers

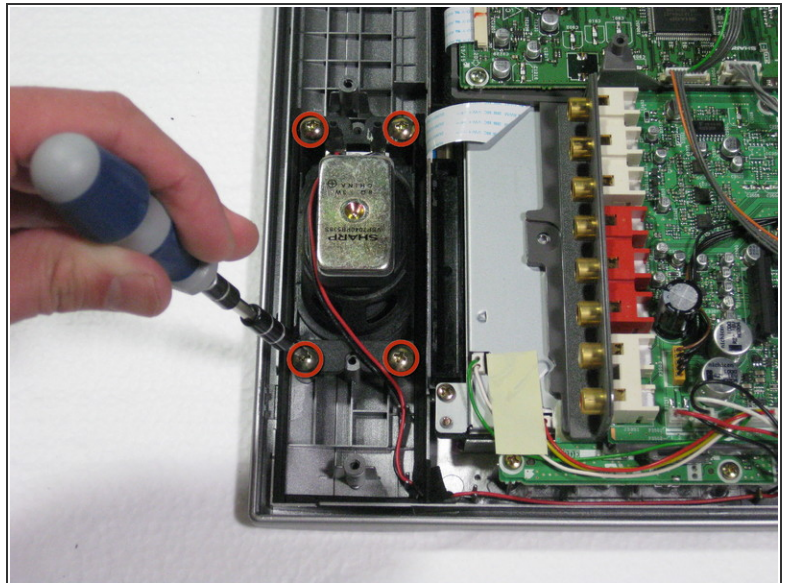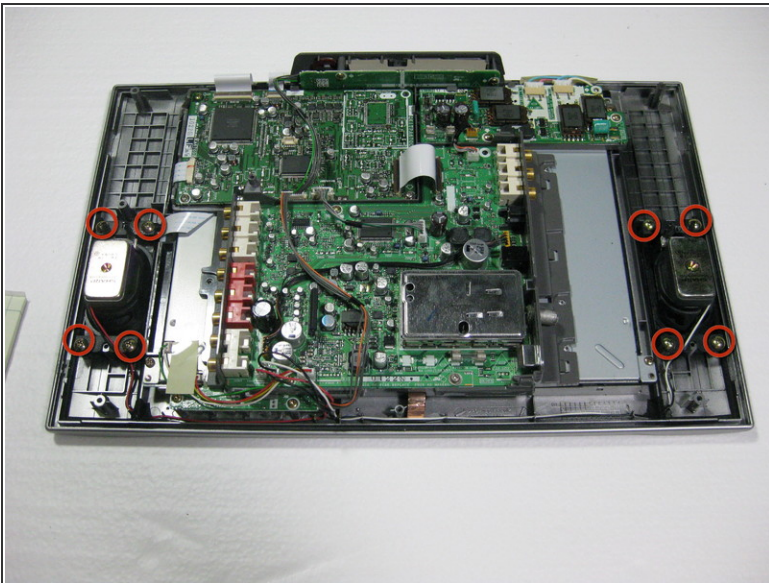

- Remove the eight 9mm screws from both speakers.

⚠ DO NOT remove speakers yet - they are still attached.



## Step 7

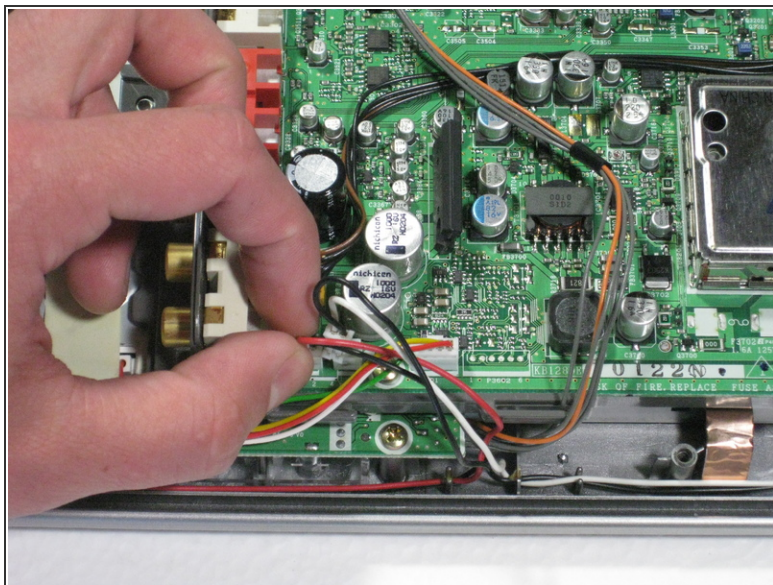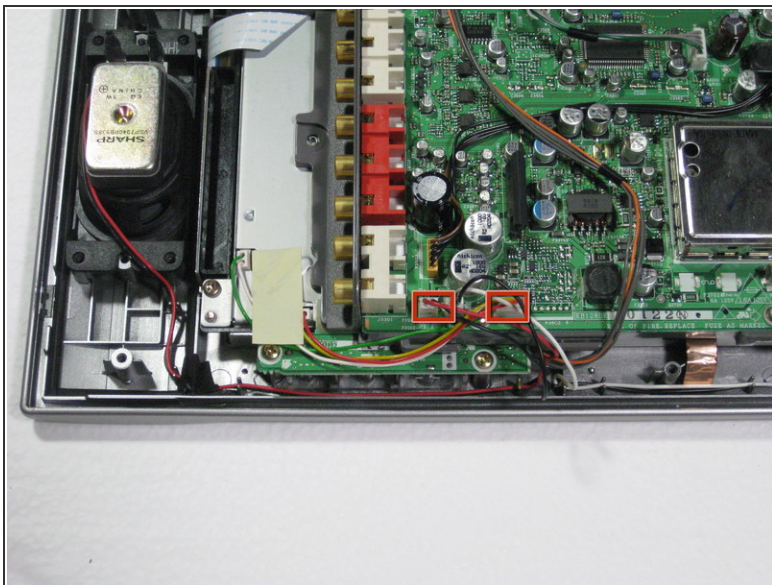

- Remove the two speaker cables from the circuit board by pinching the plastic connectors and firmly pulling up.
- ⚠ Pull on the plastic part of the connector, even though it may seem easiest to pull on the wires.
- ⚠ DO NOT remove speakers yet - they are still attached.



## Step 8

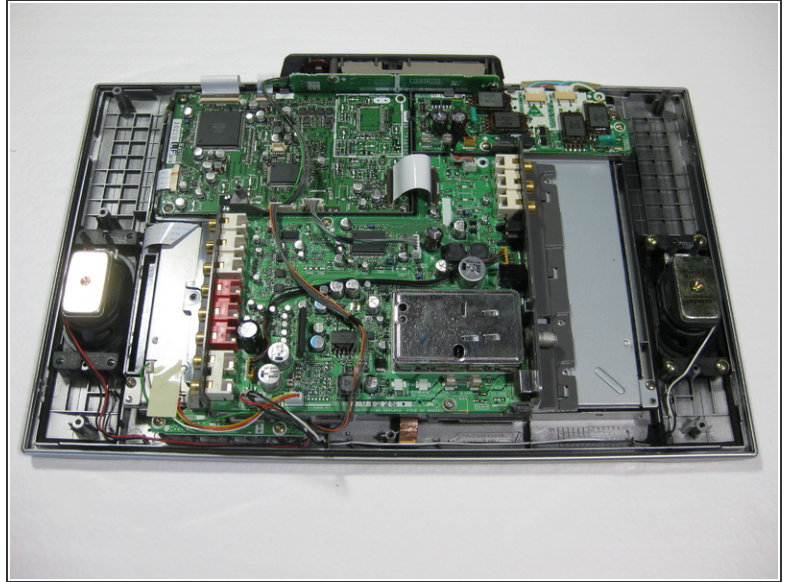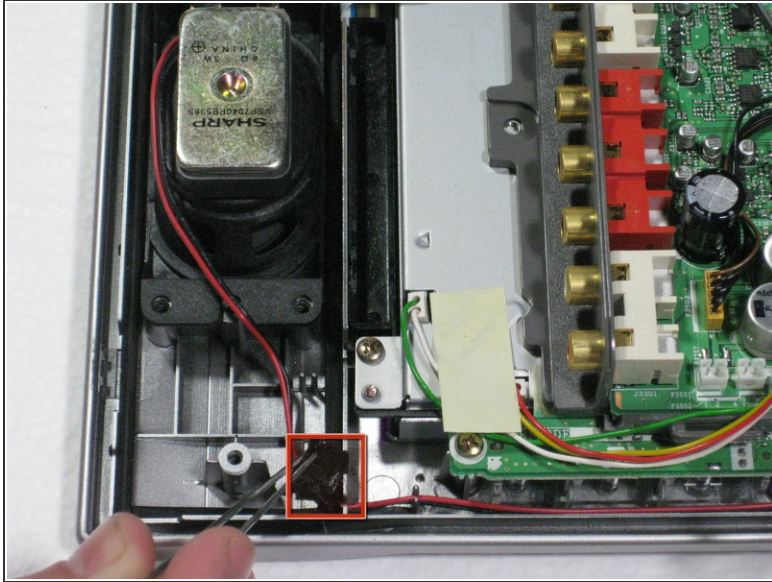

- Remove the two black tape strips (one on each side) securing the power cable to the frame.
- The speakers can now be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 05:18:31 AM.